


INSTALLATION INSTRUCTIONS (2-1/16") ELECTRICAL GAUGES

OIL TEMP GAUGE

Mounting

These gauges can be mounted in-dash or in Auto Gauge panels (2-5/8" dia. hole for 2-5/8" gauges). Fasten with brackets supplied as shown. (Hookup wire is required.) To assure proper functioning of this instrument, please read instructions thoroughly before installing.

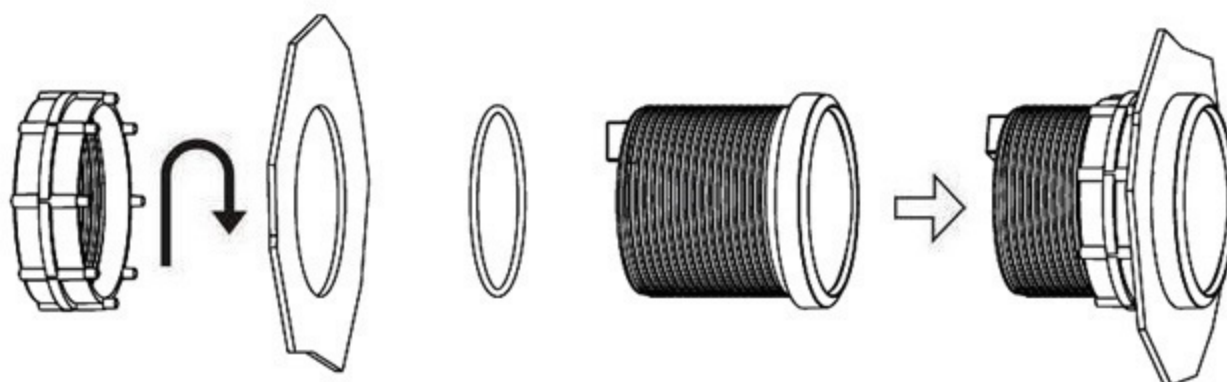


BOTTOM VIEW


1 BEFORE YOU START

1. Read instructions completely before installation.
2. Install temp gauge only when engine is cool and ignition is off.
3. Make sure all necessary tools, materials, and parts are on hand.
4. Disconnect negative (-) battery cable before installing temp gauge.
5. Make sure mounting location does not impair visibility of interfere with driving. Also check behind the mounting location for any wiring or components before drilling.
6. When connecting electrical wire, install crimp terminals and make wire splices as needed. ALWAYS insulate wire splices with electrical tape to prevent shorting.
7. Follow all necessary safety procedures for protection.

NOTE: It may be necessary to reprogram your radio, clock, etc. after reconnecting the battery.

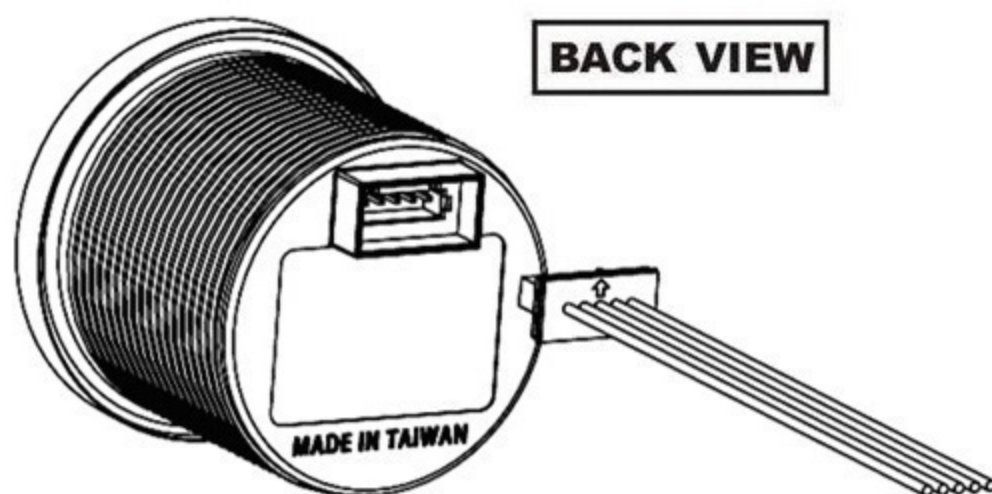

BACK VIEW

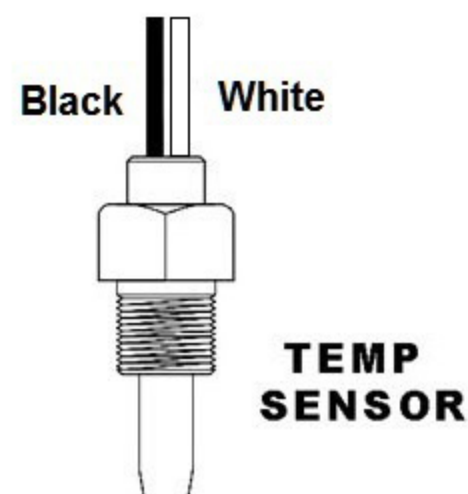

White - Connect to gauge wire
Green wire.
Black - Good engine ground.

2 INSTALLATION

Yellow - +12V Connection
Black - Good Engine Ground
Green - Temp Sensor
Choose either White or Amber back light
Red - White Light (+12V Dash)
Orange - Amber Light (+12V Dash)

