

Exhaust Gas Temperature Gauge

OPENING CEREMONY

1

POWER WIRE
(EITHER SIDE IS OK)

WARNING CONNECTOR

SENSOR WIRE.

RED - BATTERY(+)
BLACK - BATTERY(-)
WHITE - NOTE
ORANGE - NOTE

BACK VIEW

2

DOUBLE-SIDED TYPE

VISOR

METER

0.1-0.2in

CORD

BUFFER

METER CUP & HOLDER

SET KEY

3

DOUBLE-SIDED TYPE

CORD

WARNING LIGHT HAVE TO BUY EXTRALY.

4

EXHAUST GAS TEMP SENSOR

(Diagram B)

RED - CONNECT TO SENSOR WIRE
WHITE WIRE
BLUE - CONNECT TO SENSOR WIRE
BLACK WIRE

5

EXHAUST MANIFOLD

Drill a hole
On either position
And installing the
1/8 NPT thread jointer

6

SENSOR WIRE

YELLOW CONNECTOR

BLACK / WHITE

EXHAUST GAS TEMP SENSOR

BACK VIEW

7

NOTE:GAUGE REQUIRE FUNCTION

REQUIRE FUNCTION		INSTALLATION
DAY TIME	NIGHT TIME	
WHITE SCALE	WHITE SCALE	WHITE WIRE→connect to ACC. AMBER WIRE→NO connect
AMBER SCALE	AMBER SCALE	WHITE WIRE→NO connect AMBER WIRE→connect to ACC.
WHITE SCALE	AMBER SCALE	WHITE WIRE→ connect to ACC AMBER WIRE→connect to PARKING LAMP
AMBER SCALE	WHITE SCALE	WHITE WIRE→connect to PARKING LAMP AMBER WIRE→connecto to ACC.

8

1.MUTE SELECTER
SET KEY HOLD AFTER POWER ON.

2.PEAK SELECTER

NORMAL MODE → SET KEY → PEAK MODE → SET KEY → NORMAL MODE

HOLD SET KEY 3SEC ↓

CLEAR PEAK → NORMAL MODE

"PEAK LED FLASH"

3.WARNING SET SECECTER

HOLD SET KEY 5 SEC → SET KEY → WARNING SET MODE → SET KEY → POINTER MOVE SLOWLY

"POINTER LED FLASH"

HOLD SET KEY ↓ OVER 5SEC ↓

POINTER MOVE QUICKLY → NORMAL MODE