


INSTALLATION INSTRUCTIONS (2-1/16") ELECTRICAL GAUGES

FUEL PRESS GAUGE

Mounting

These gauges can be mounted in-dash or in Auto Gauge panels (2-5/8" dia. hole for 2-5/8" gauges). Fasten with brackets supplied as shown. (Hookup wire is required.) To assure proper functioning of this instrument, please read instructions thoroughly before installing.

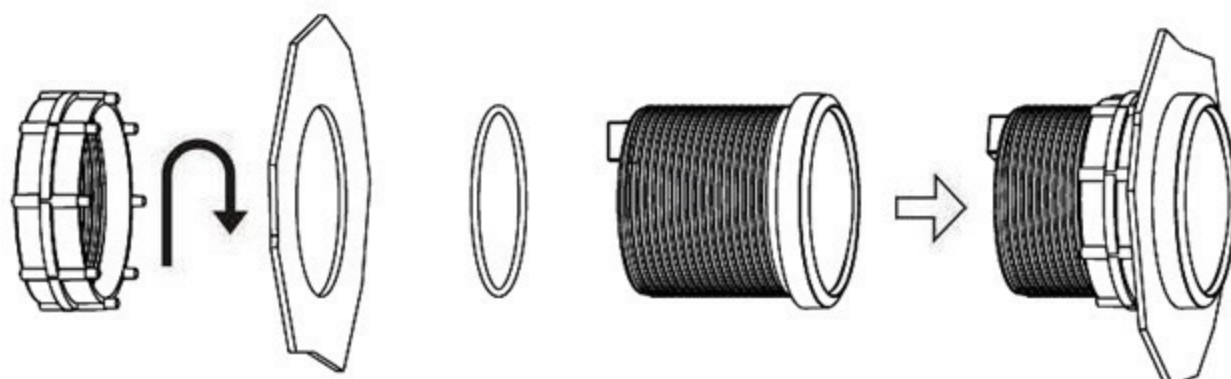


BOTTOM VIEW


1 BEFORE YOU START

1. Read instructions completely before installation.
2. Install press gauge only when engine is cool and ignition is off.
3. Make sure all necessary tools, materials, and parts are on hand.
4. Disconnect negative (-) battery cable before installing press gauge.
5. Make sure mounting location does not impair visibility or interfere with driving. Also check behind the mounting location for any wiring or components before drilling.
6. When connecting electrical wire, install crimp terminals and make wire splices as needed. ALWAYS insulate wire splices with electrical tape to prevent shorting.
7. Follow all necessary safety procedures for protection.

NOTE: It may be necessary to reprogram your radio, clock, etc. after reconnecting the battery.

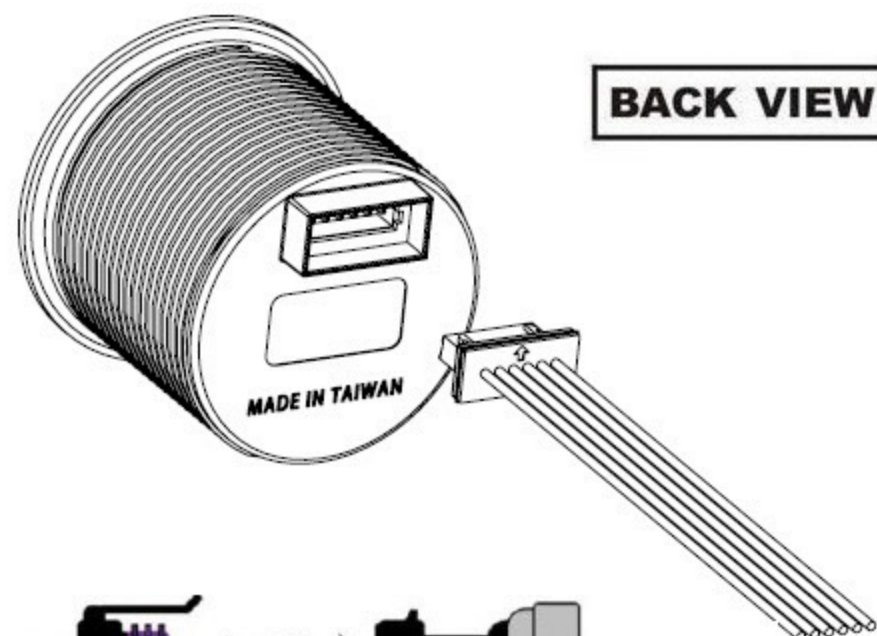

BACK VIEW

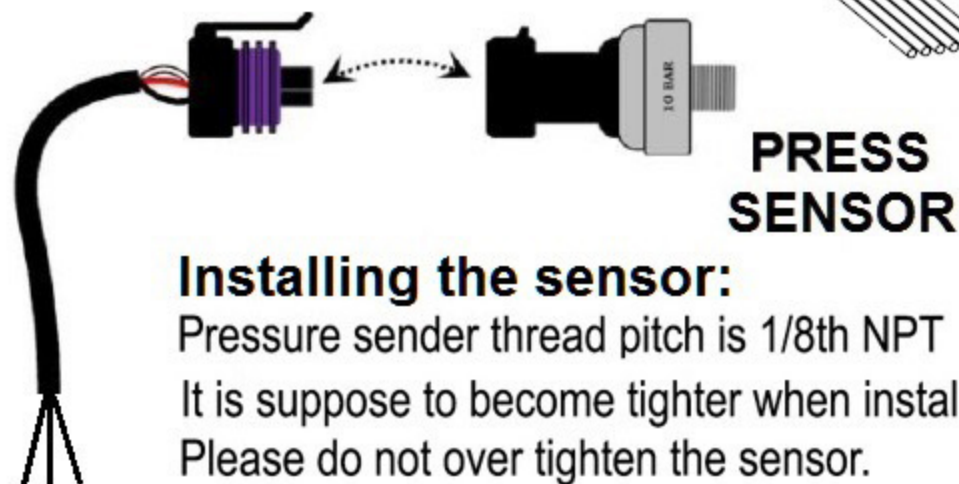

PRESS
SENSOR

Installing the sensor:

Pressure sender thread pitch is 1/8th NPT
It is supposed to become tighter when installing.
Please do not over tighten the sensor.

Black to chassis ground

Brown from sender to brown on gauge harness.

Green from sender to green on gauge harness.

2 INSTALLATION

Yellow - +12V Connection

Black - Good Engine Ground

Green - Press Sensor

Choose either White or Amber back light

Red - White Light (+12V Dash)

Orange - Amber Light (+12V Dash)

Brown - Press Sensor

