

ELECTRICAL GAUGES W/PEAK

TRANSPARENT LENS SERIES AMBER RED & SUPER WHITE LED

(270° SCALE)

Oil Pressure Gauge

OPENING CEREMONY

1

POWER WIRE
(EITHER SIDE IS OK)

WARNING CONNECTOR

SENSOR WIRE.

RED - BATTERY(+)
BLACK - BATTERY(-)
WHITE - NOTE
ORANGE - NOTE

BACK VIEW

2

DOUBLE-SIDED TYPE

VISOR

METER

0.1-0.2in

CORD

BUFFER

METER CUP & HOLDER

SET KEY

3

DOUBLE-SIDED TYPE

CORD

WARNING LIGHT HAVE TO BUY EXTRALY.

4

ELECTRICAL OIL PRESS SENSOR

1/8NPT Thread

RED BLACK GREEN

RED - CONNECT TO SENSOR WIRE
RED WIRE.
GREEN - CONNECT TO SENSOR WIRE
WHITE WIRE.
BLACK - CONNECT TO SENSOR WIRE
BLACK WIRE.

5

Detach the original element

Engine

Sensor attachment (commercially available)

Thread Size 1/8 NPT

Oil Press Sensor

O-ring

Temperature Sensor

Engine

※SENSOR ATTACHMENT HAVE TO BUY EXTRALY

6

SENSOR WIRE

BLACK CONNECTOR

BLACK WHITE

RED

BACK VIEW

ELECTRICAL OIL PRESS SENSOR

7

NOTE: GAUGE REQUIRE FUNCTION

REQUIRE FUNCTION		INSTALLATION
DAY TIME	NIGHT TIME	
WHITE SCALE	WHITE SCALE	WHITE WIRE→connect to ACC. AMBER WIRE→NO connect
AMBER SCALE	AMBER SCALE	WHITE WIRE→NO connect AMBER WIRE→connect to ACC.
WHITE SCALE	AMBER SCALE	WHITE WIRE→ connect to ACC. AMBER WIRE→connect to PARKING LAMP.
AMBER SCALE	WHITE SCALE	WHITE WIRE→connect to PARKING LAMP AMBER WIRE→connecto to ACC.

8

1.MUTE SELECTER
SET KEY HOLD AFTER POWER ON.

2.PEAK SELECTER

HOLD SET KEY 3SEC

CLEAR PEAK

NORMAL MODE

"PEAK LED FLASH"

3.WARNING SET SECECTER

HOLD SET KEY 5 SEC

SET KEY

NORMAL MODE

WARNING SET MODE

POINTER MOVE SLOWLY

"POINTER LED FLASH"

HOLD SET KEY OVER 5SEC

POINTER MOVE QUICKLY

NORMAL MODE