
STEPMOTOR MOVEMENT


ELECTRICAL GAUGES


TRANSPARENT LENS SERIES AMBER RED LED DISPLAY


Tachometer


OPENING CEREMONY

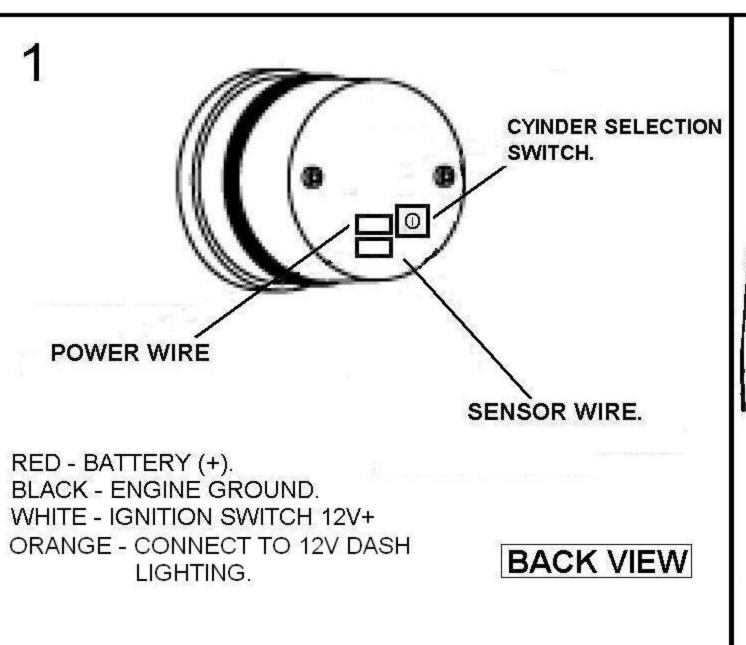


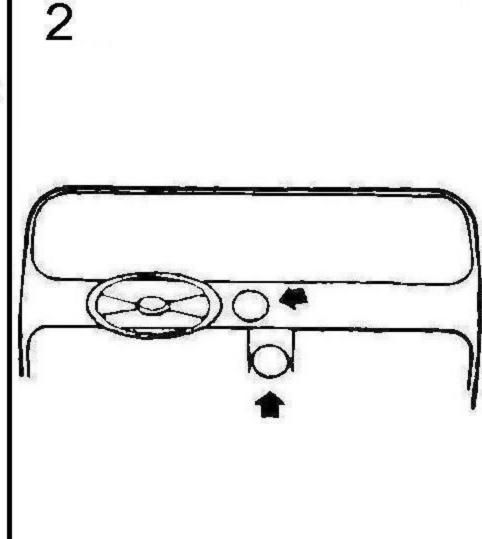


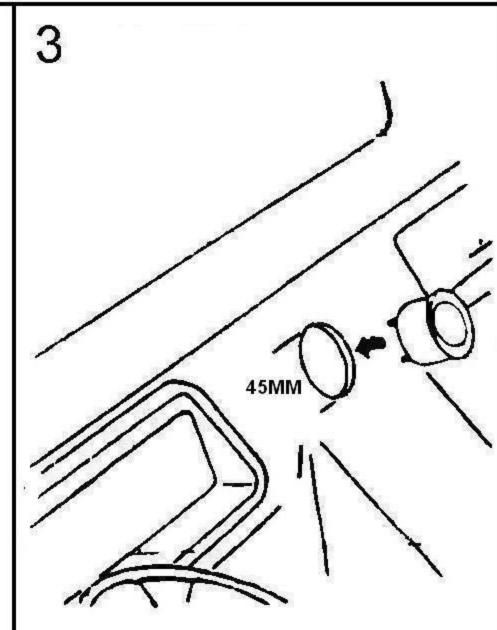

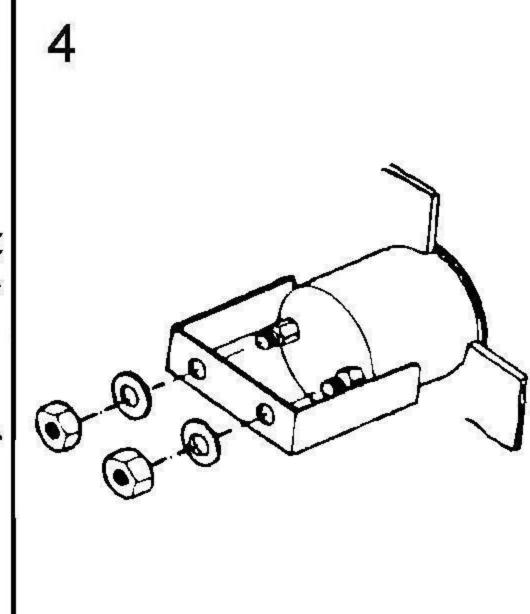

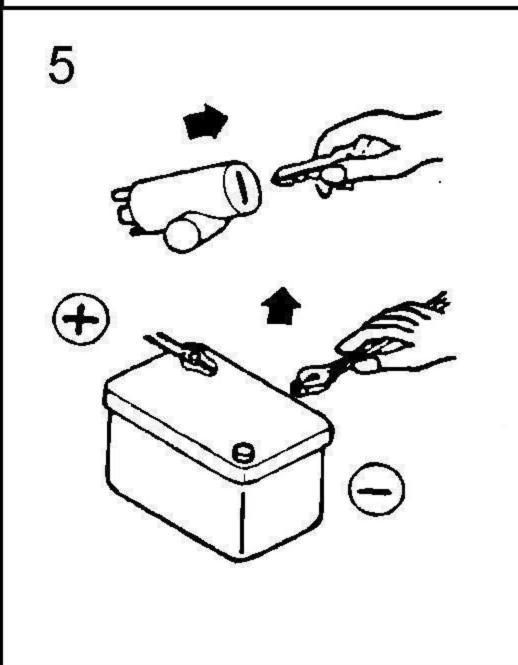

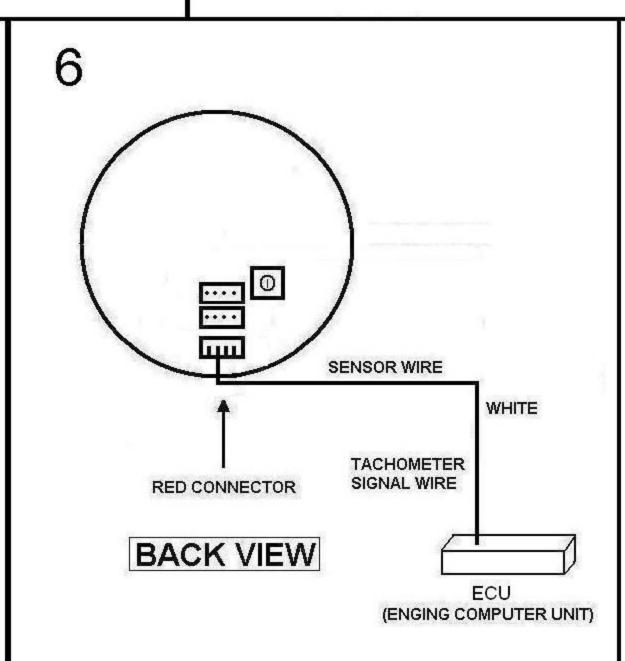

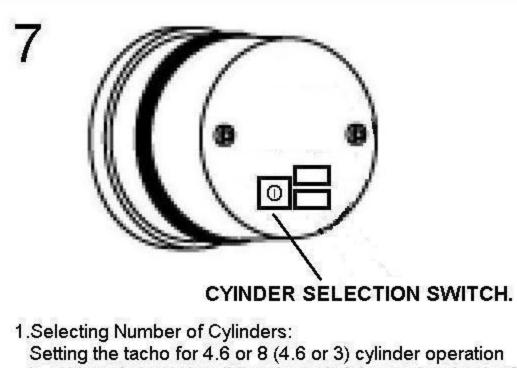

- Selecting Number of Cylinders:
 Setting the tacho for 4.6 or 8 (4.6 or 3) cylinder operation is achieved simply by sliding the switch, located on back of the tachometer body, to coincide with the appropriate number of cylinders of the engine.

 Switch position:
- 0=10 cylinders,1=1 cylinders,2 = 2 cylinders
 3=3 cylinders,4=4 cylinders,5=cylinders,.........
 3.When setting the number of cylinders for a rotary engine.
 set the cylinders number selection to 4 cylinders for 2
 rotors,and to 6 cylinders for 3 rotors.
- 4.The red or black wire MUST be remover before adjustment to the cylinder setting is made from the cylinder selector switch.

