

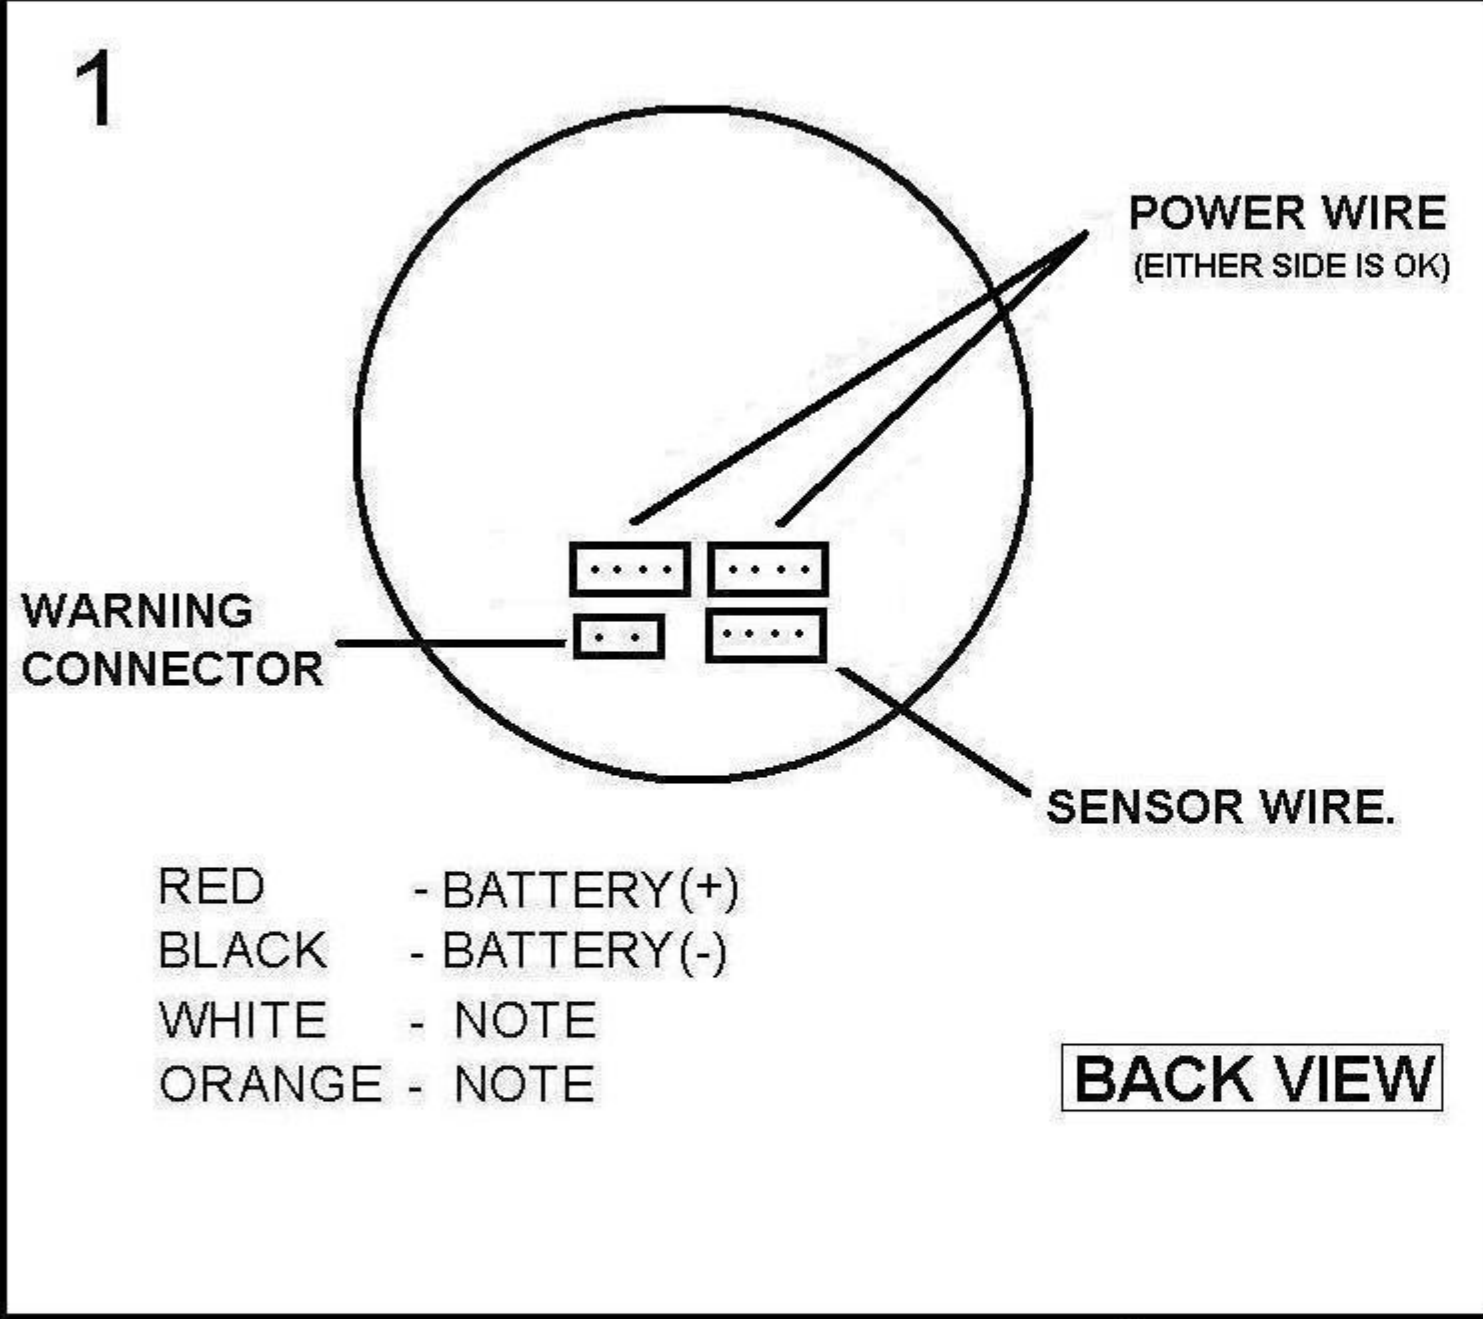
ELECTRICAL GAUGES W/PEAK

TRANSPARENT LENS SERIES AMBER RED & SUPER WHITE LED

(270° SCALE)

Tachometer

OPENING CEREMONY

1

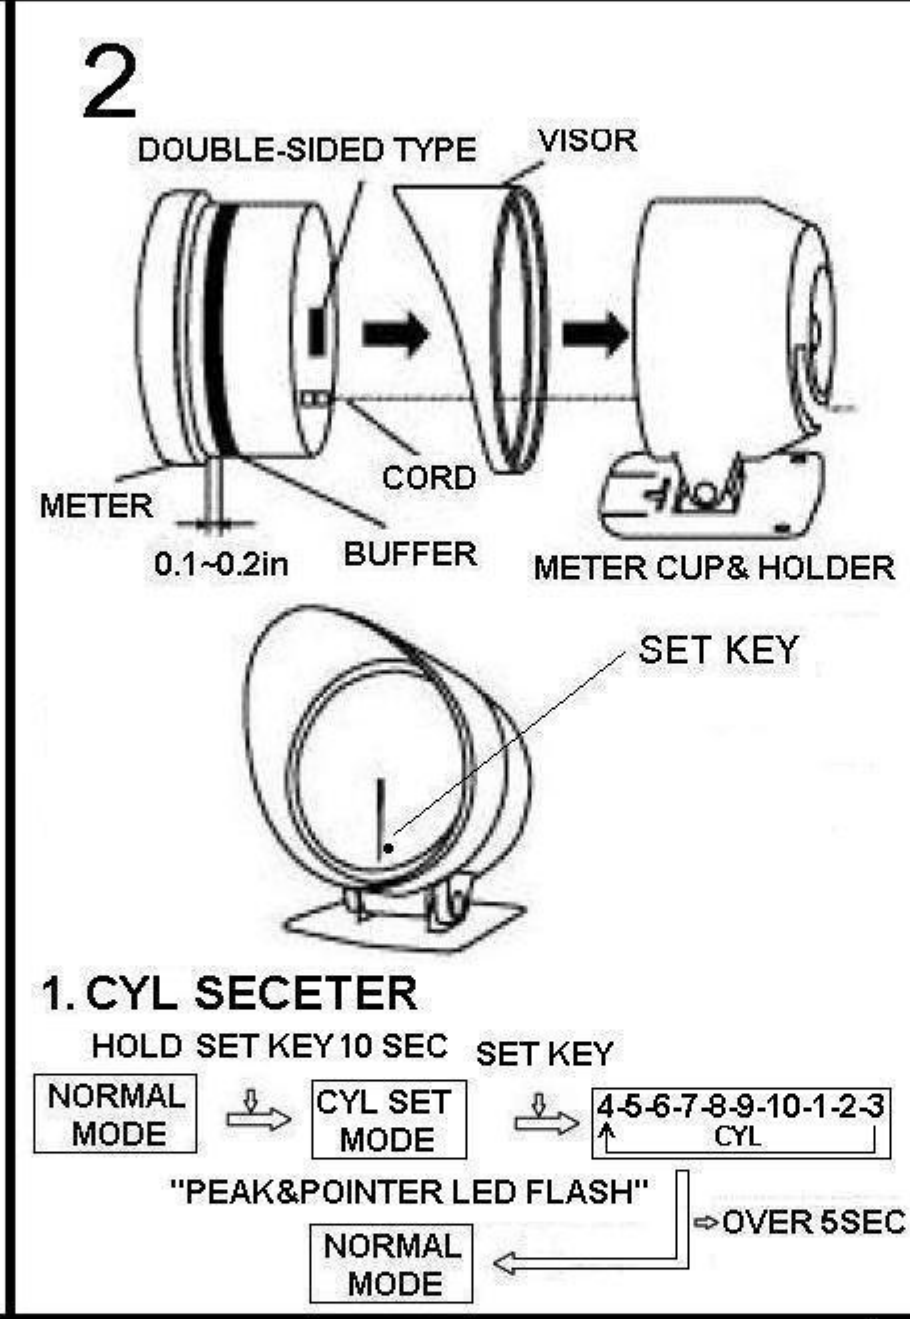
POWER WIRE
(EITHER SIDE IS OK)

WARNING CONNECTOR

SENSOR WIRE.

RED - BATTERY(+)
BLACK - BATTERY(-)
WHITE - NOTE
ORANGE - NOTE

BACK VIEW

2

DOUBLE-SIDED TYPE

METER

0.1~0.2in

CORD

BUFFER

VISOR

METER CUP & HOLDER

SET KEY

1. CYL SECTER

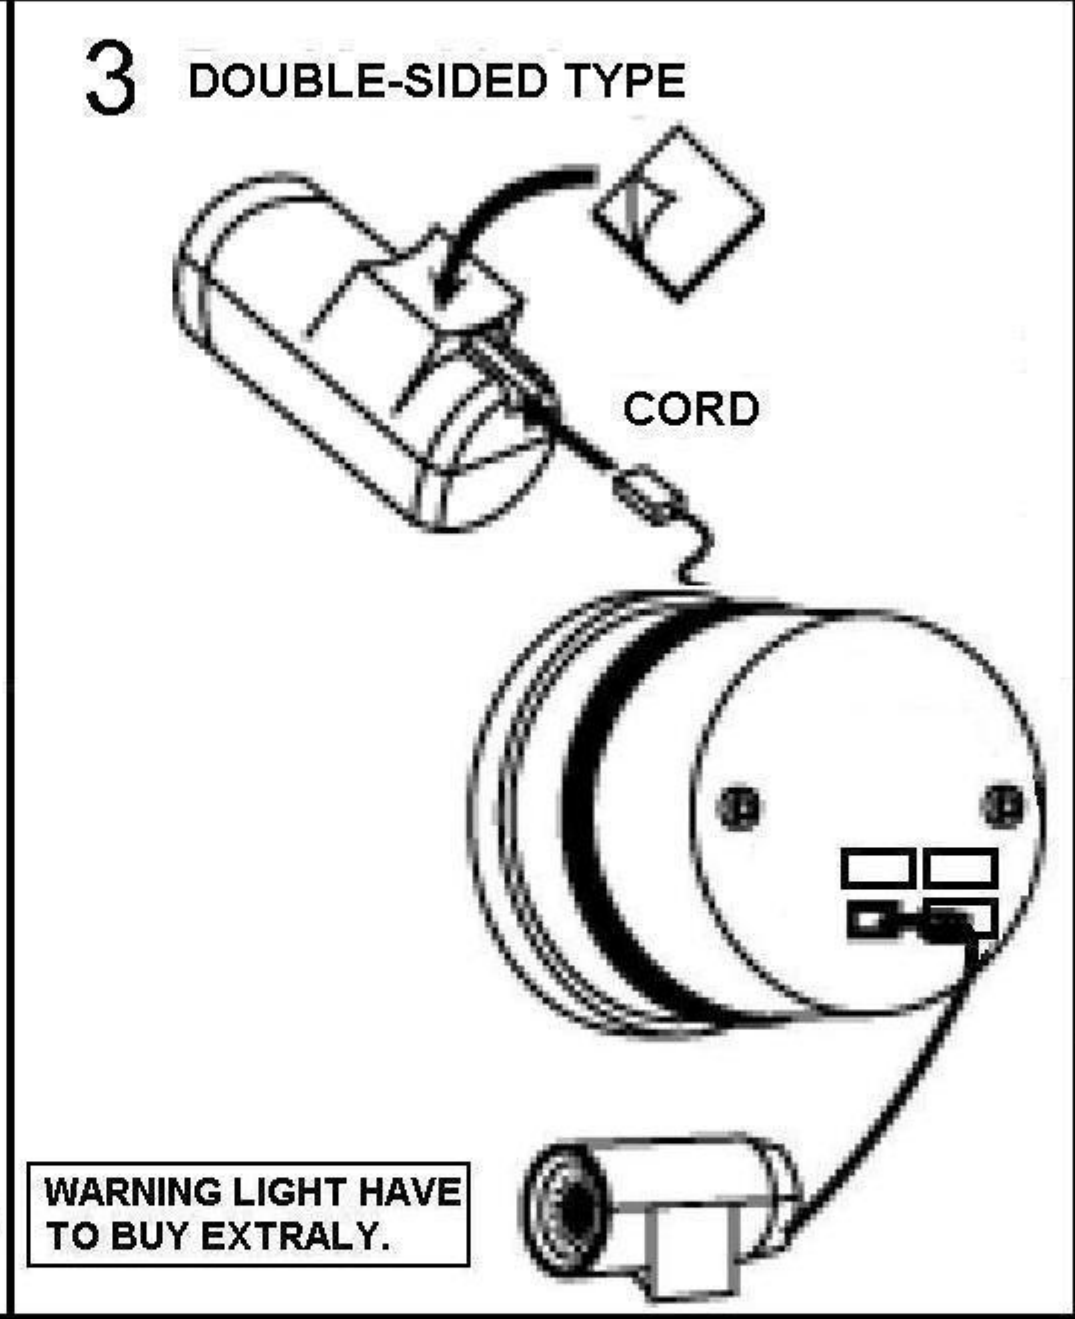
HOLD SET KEY 10 SEC

SET KEY

NORMAL MODE → CYL SET MODE → 4-5-6-7-8-9-10-1-2-3 CYL

"PEAK&POINTER LED FLASH"

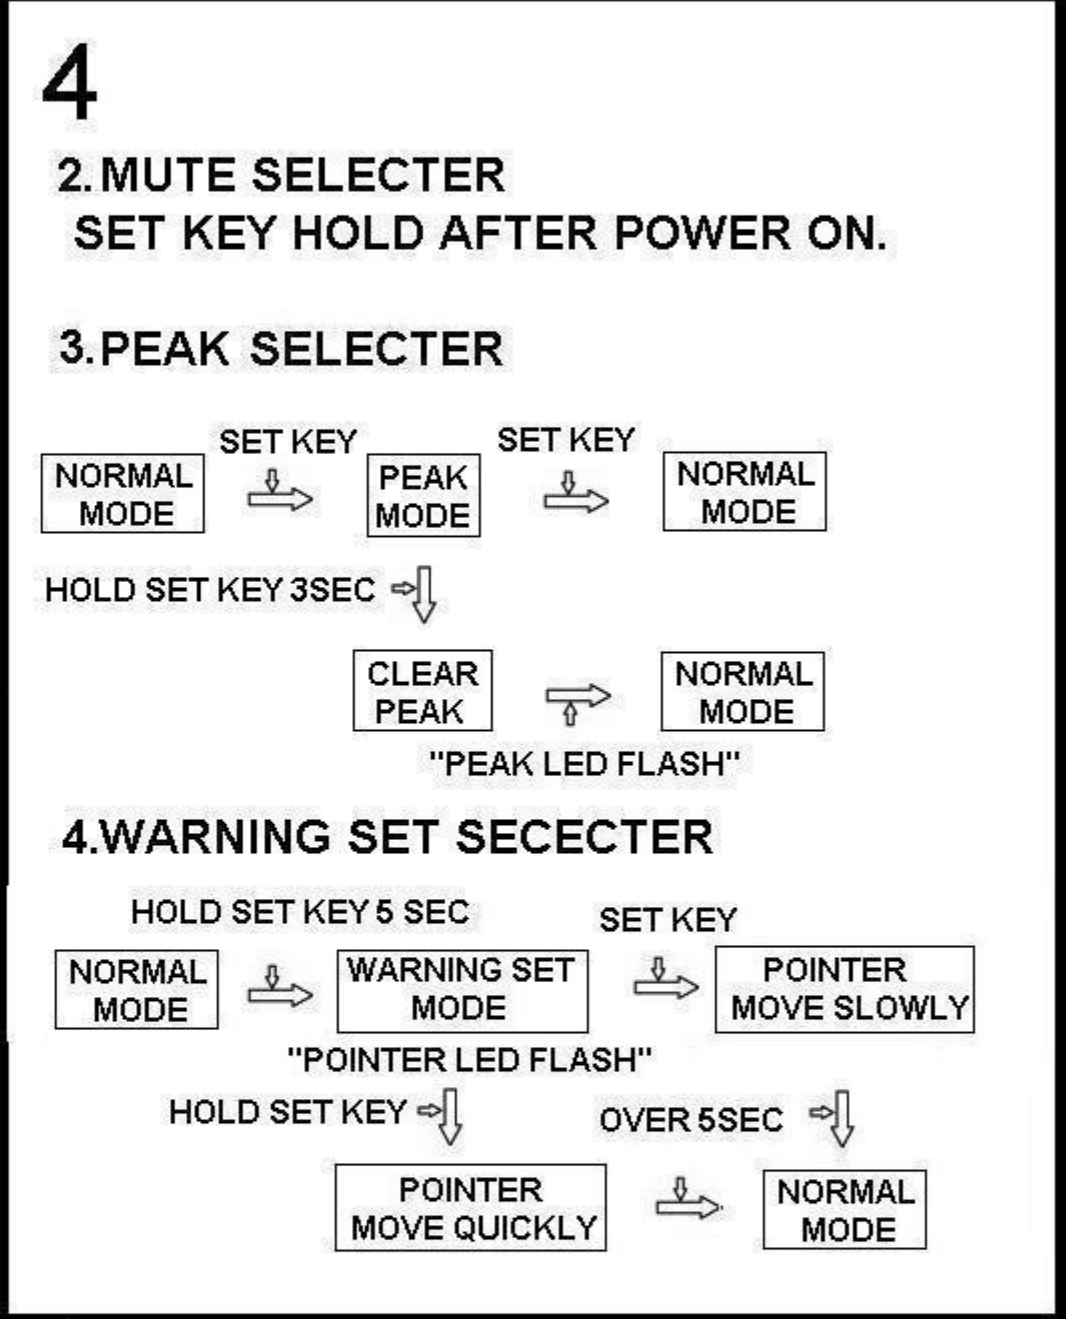
NORMAL MODE ← OVER 5SEC

3

DOUBLE-SIDED TYPE

CORD

WARNING LIGHT HAVE TO BUY EXTRALY.

4

2. MUTE SELECTER
SET KEY HOLD AFTER POWER ON.

3. PEAK SELECTER

SET KEY

SET KEY

NORMAL MODE → PEAK MODE → NORMAL MODE

HOLD SET KEY 3SEC → CLEAR PEAK → NORMAL MODE

"PEAK LED FLASH"

4. WARNING SET SECECTER

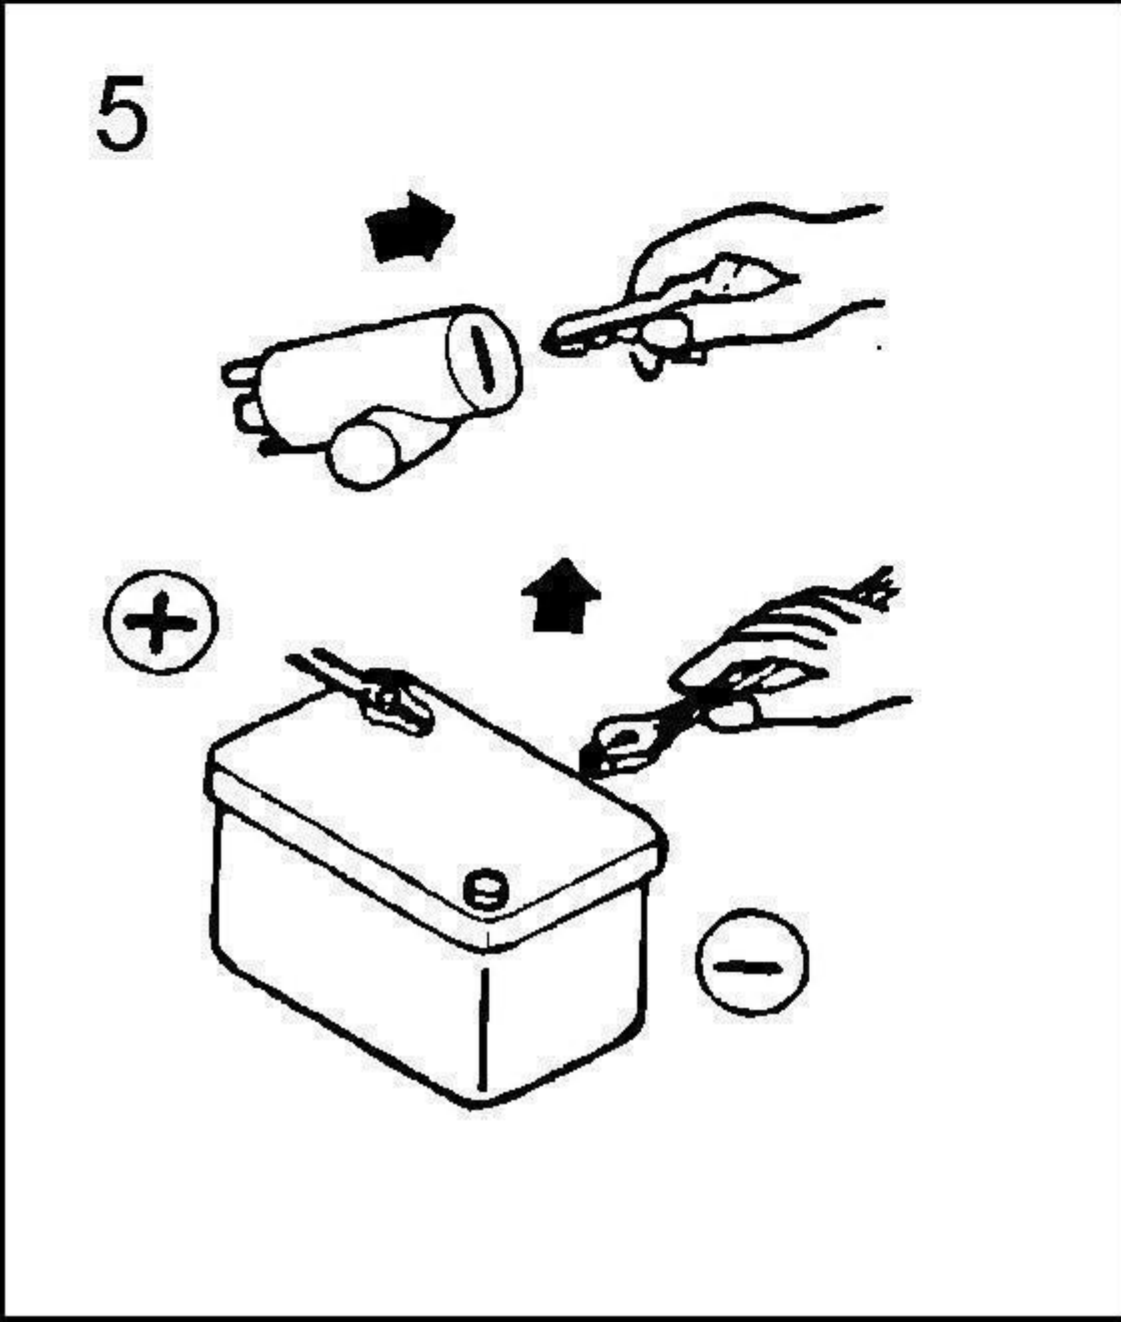
HOLD SET KEY 5 SEC

SET KEY

NORMAL MODE → WARNING SET MODE → POINTER MOVE SLOWLY

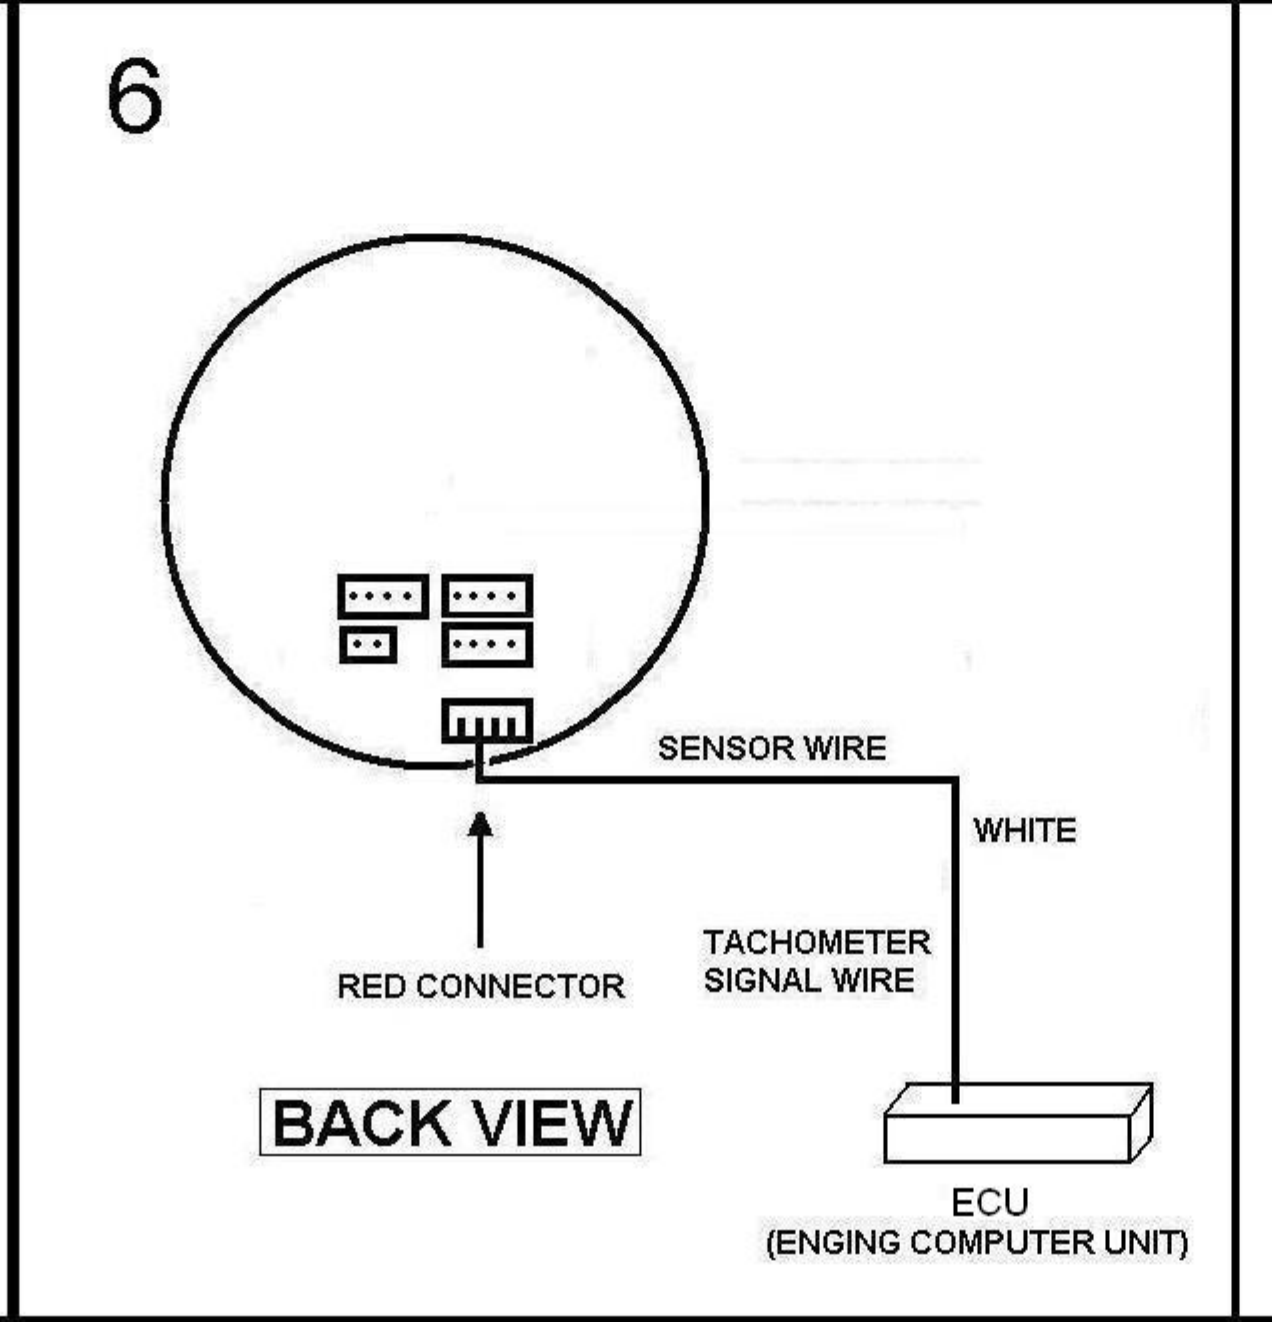
"POINTER LED FLASH"

HOLD SET KEY → OVER 5SEC → POINTER MOVE QUICKLY → NORMAL MODE

5

+

-

6

SENSOR WIRE

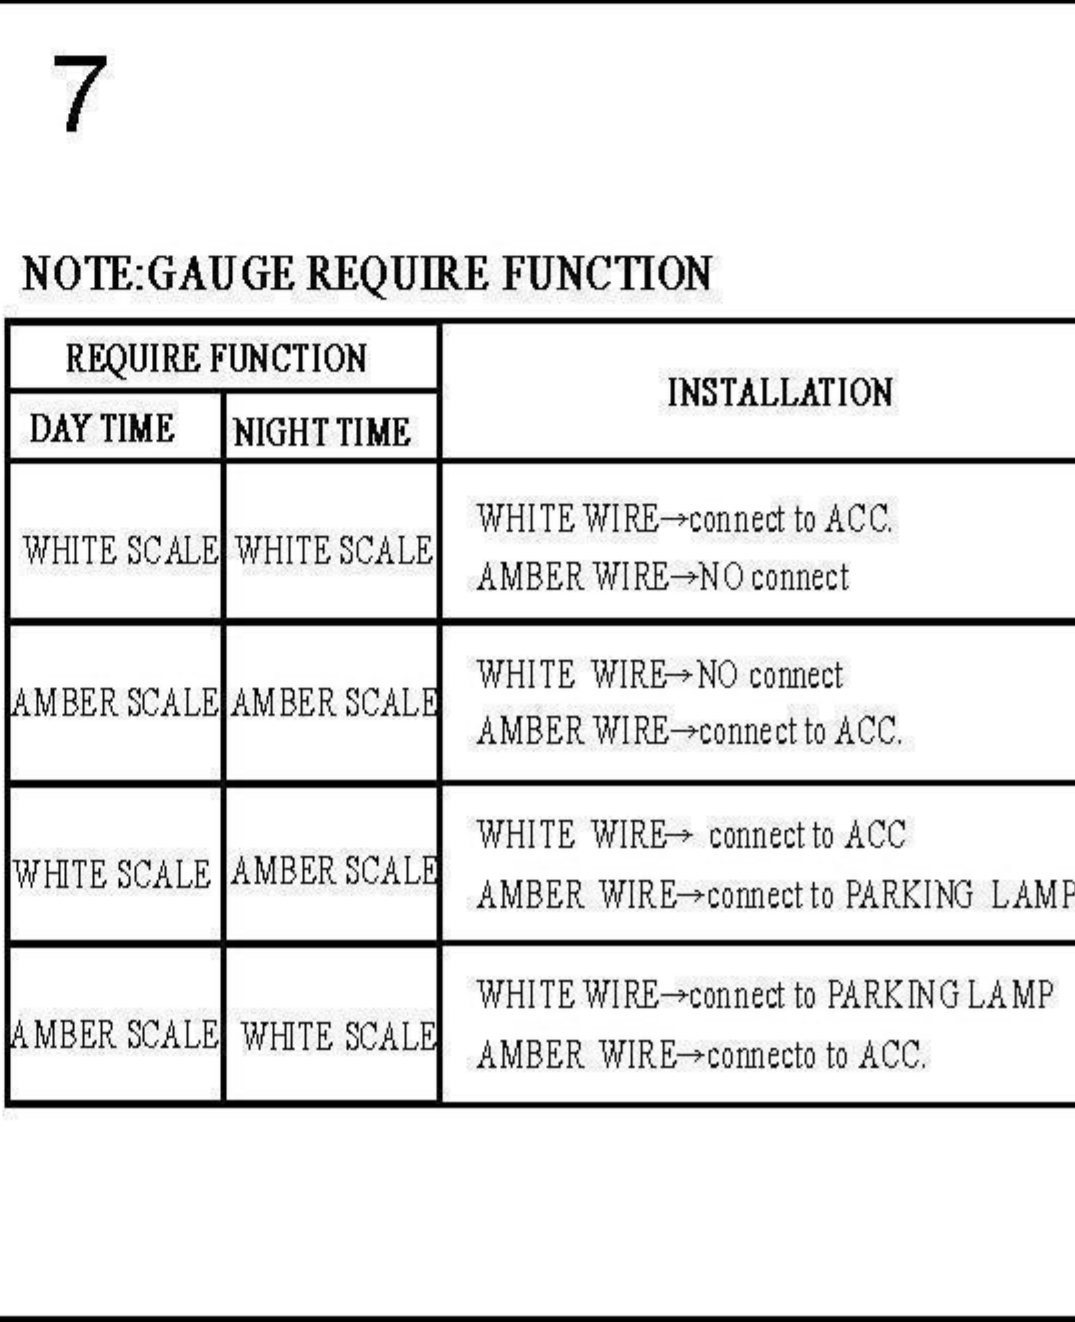
WHITE

TACHOMETER SIGNAL WIRE

RED CONNECTOR

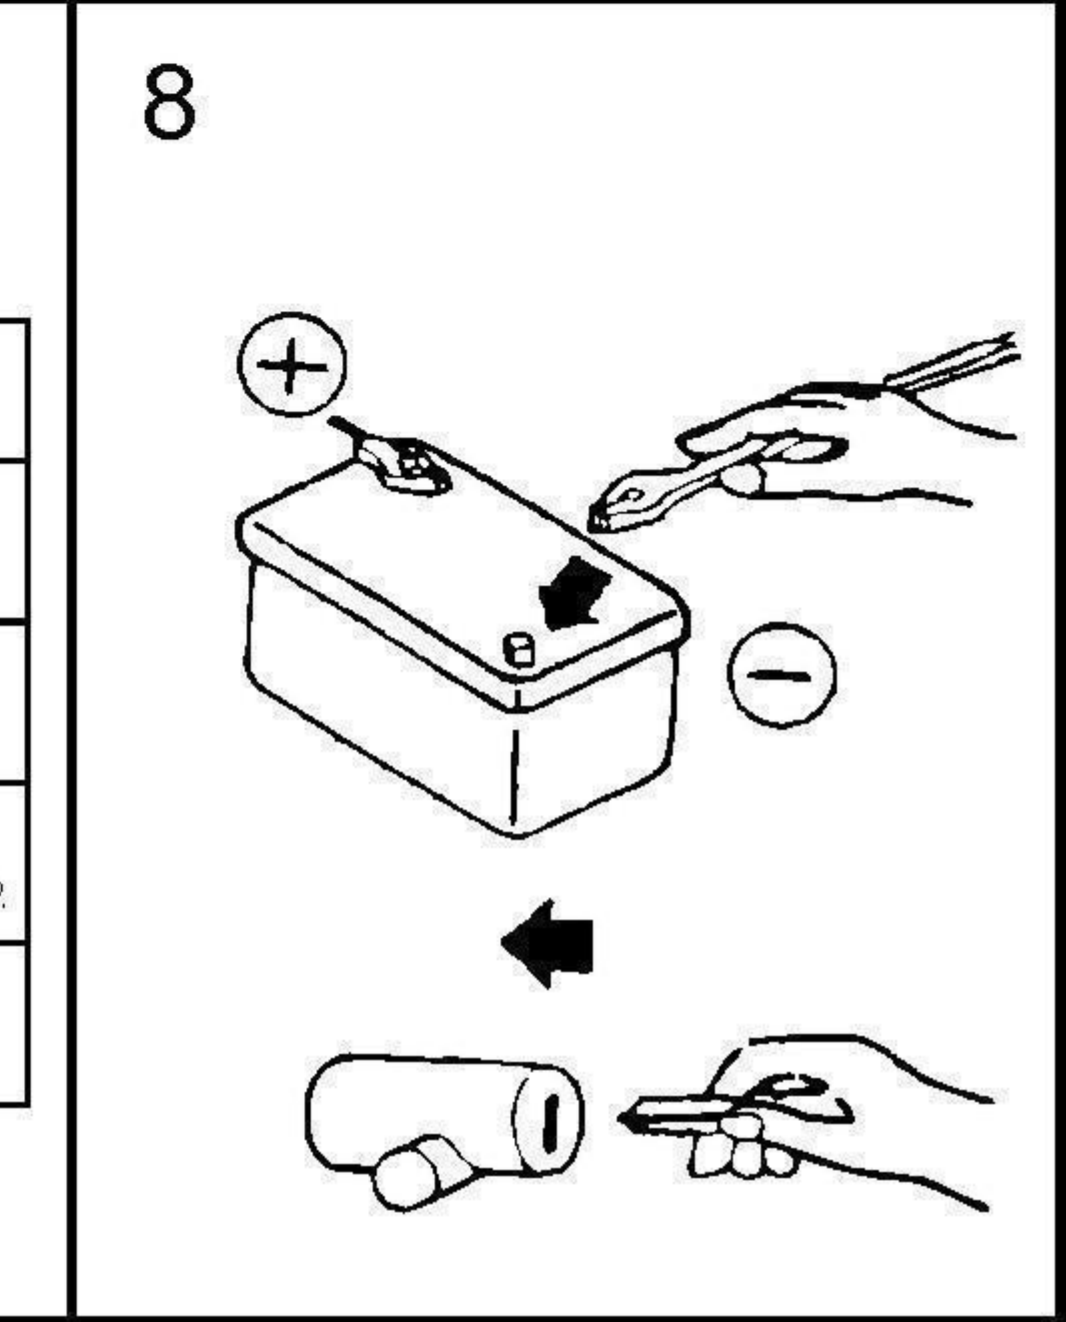
BACK VIEW

ECU
(ENGING COMPUTER UNIT)

7

NOTE:GAUGE REQUIRE FUNCTION

REQUIRE FUNCTION		INSTALLATION
DAY TIME	NIGHT TIME	
WHITE SCALE	WHITE SCALE	WHITE WIRE→connect to ACC. AMBER WIRE→NO connect
AMBER SCALE	AMBER SCALE	WHITE WIRE→NO connect AMBER WIRE→connect to ACC.
WHITE SCALE	AMBER SCALE	WHITE WIRE→ connect to ACC AMBER WIRE→connect to PARKING LAMP.
AMBER SCALE	WHITE SCALE	WHITE WIRE→connect to PARKING LAMP AMBER WIRE→connecto to ACC.

8

+

-