

INSTALLATION INSTRUCTIONS


(2-1/16") ELECTRICAL GAUGES

TRUCK / YACHT GAUGE SERIES

Mounting

These gauges can be mounted in-dash or in Auto Gauge panels (2-5/8" dia. hole for 2-5/8" gauges). Fasten with brackets supplied as shown. (Hookup wire is required.) To assure proper functioning of this instrument, please read instructions thoroughly before installing.


NOTE: Some late model vehicles use electronic sensors in their pressure and temperature senders for engine control functions. Before removing the original sender, we recommend that you contact your automotive dealer to be sure no critical functions will be disrupted. With pressure gauges it is beneficial to add a T-fitting to install your new gauge and to keep the warning light operational. This allows you to monitor the pressure and still have a warning light to indicate emergency conditions.

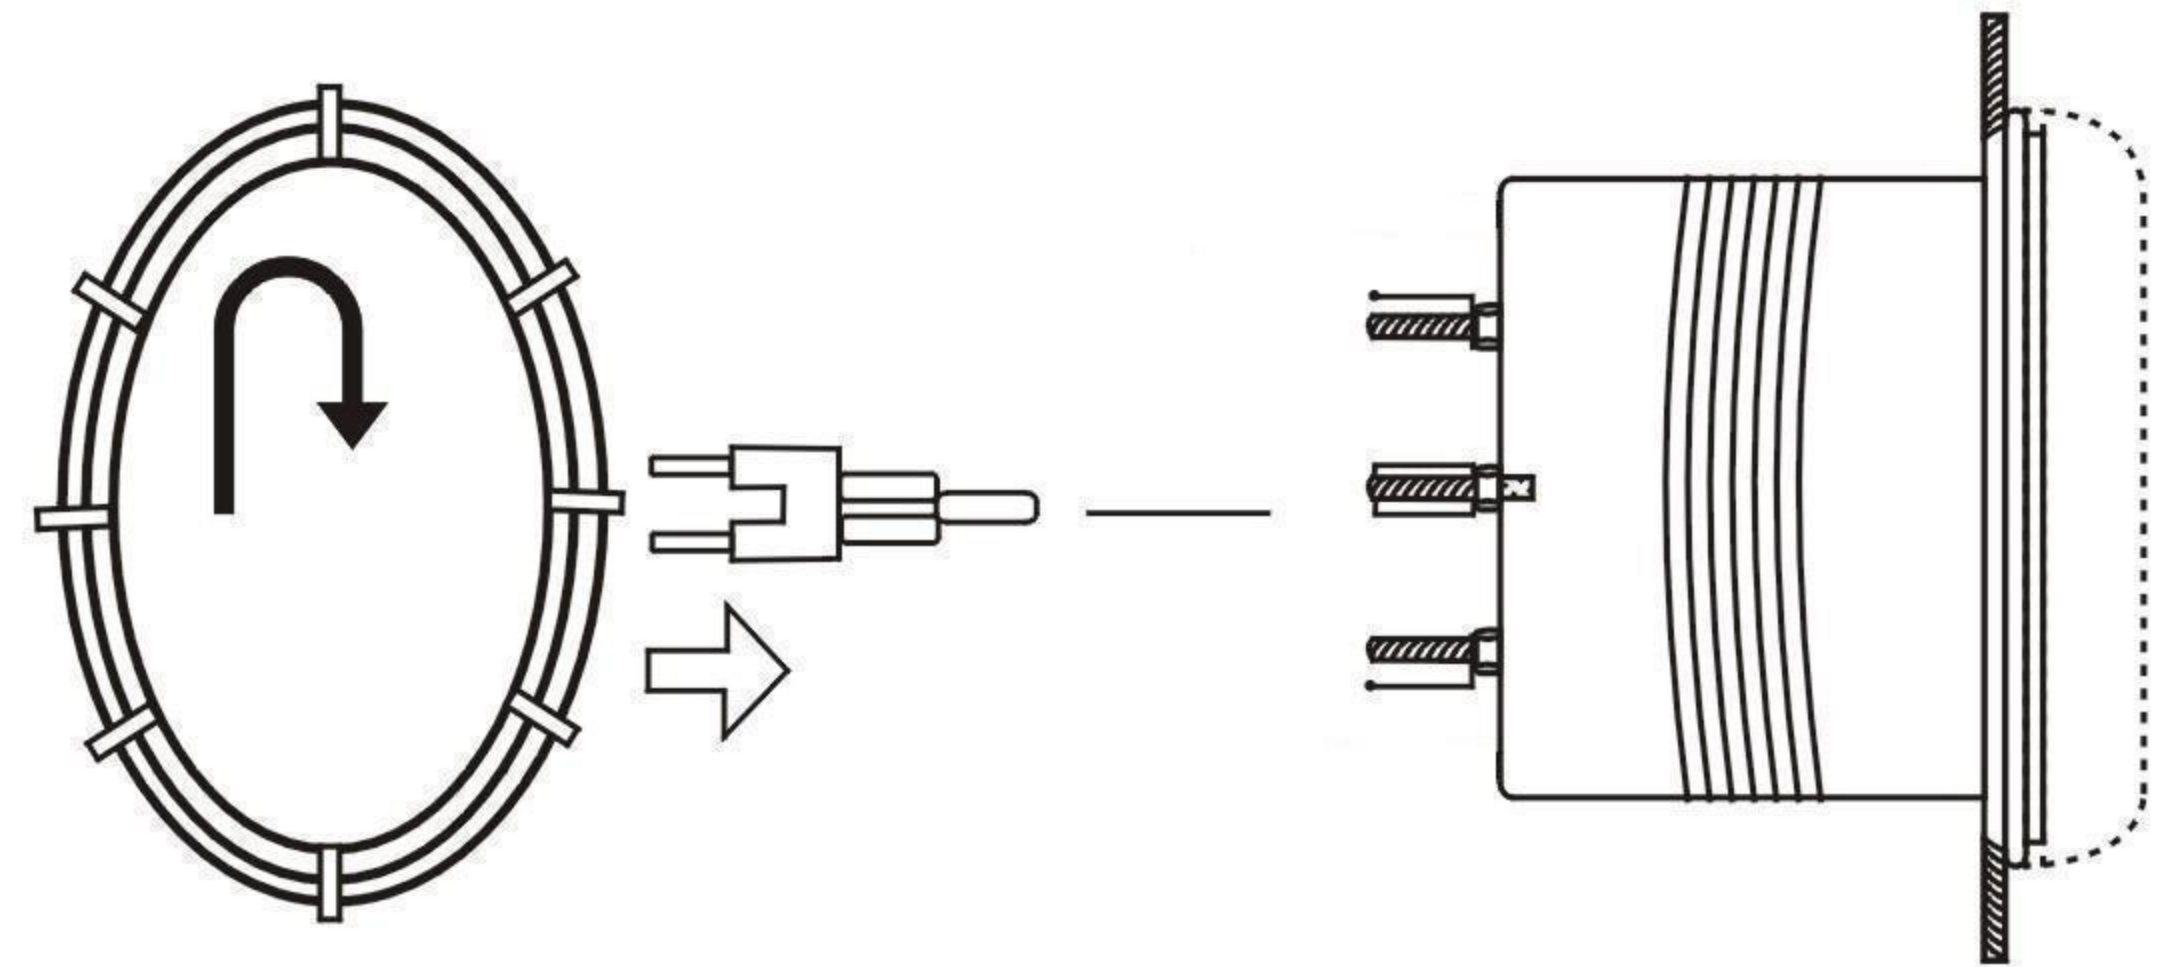

BOTTOM VIEW

Voltmeter

1. Disconnect negative (-) battery cable.
2. Using 18 gauge wire (Auto Meter wire kit no. 2214 is recommended), route one length through firewall using grommet. Attach one end to the negative (-) terminal on back of gauge, and the opposite end to a good engine ground.
3. Attach one length of wire to the positive (+) terminal on back of gauge and opposite end to 12V terminal on ignition switch or other 12V power source.
4. Install light on back of gauge and connect wire to dash lighting circuit or to other 12V power source.
5. Reconnect negative (-) battery cable.

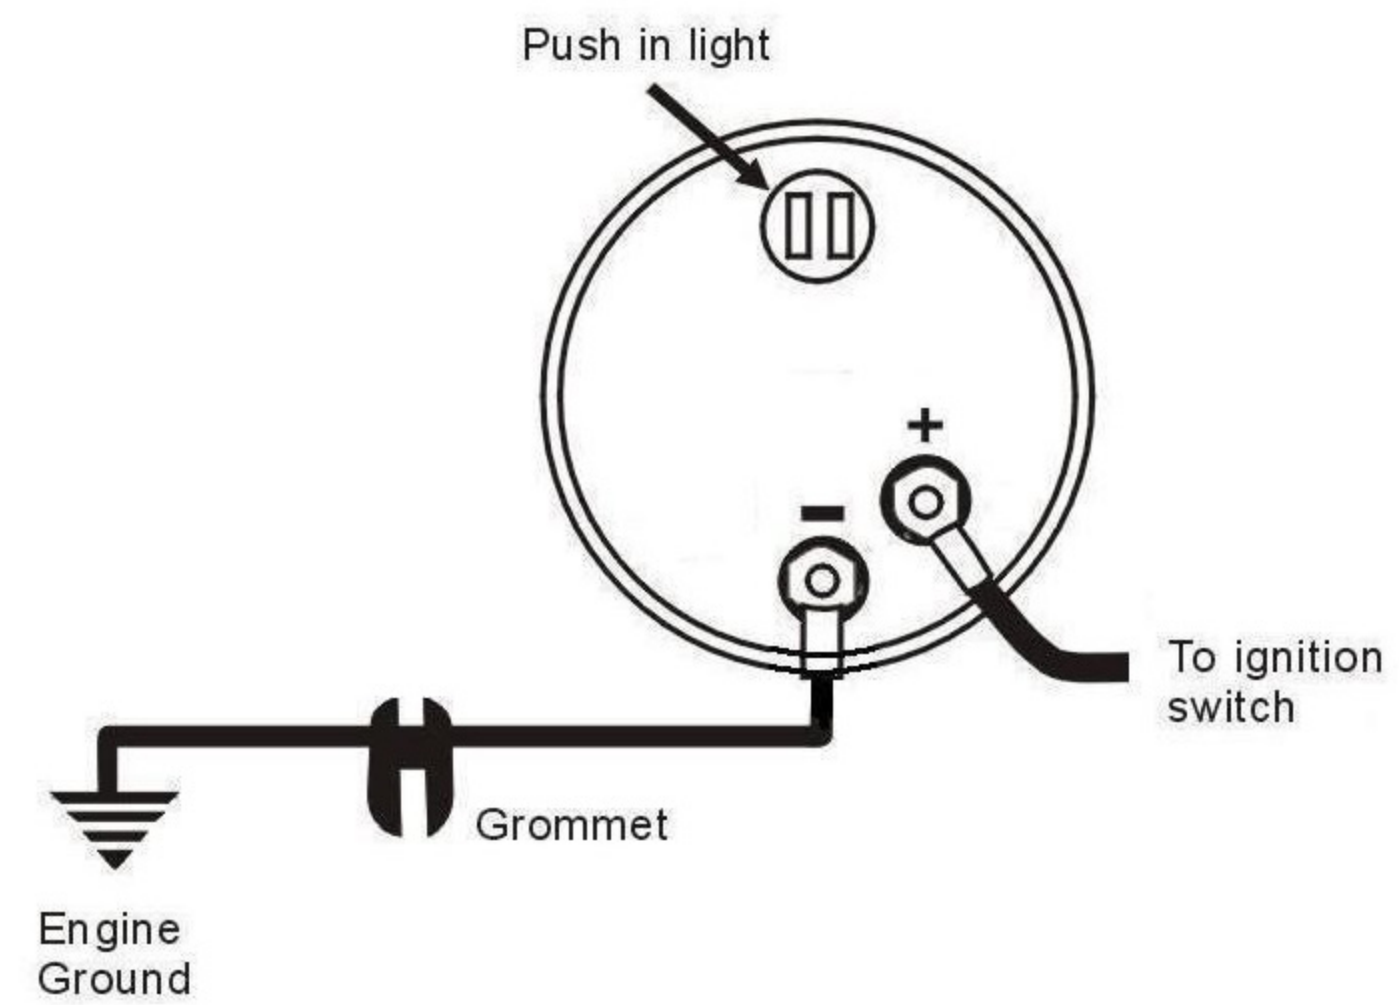

BACK VIEW