


EVO Series Fuel Pressure (EGT Below) Green/White Display

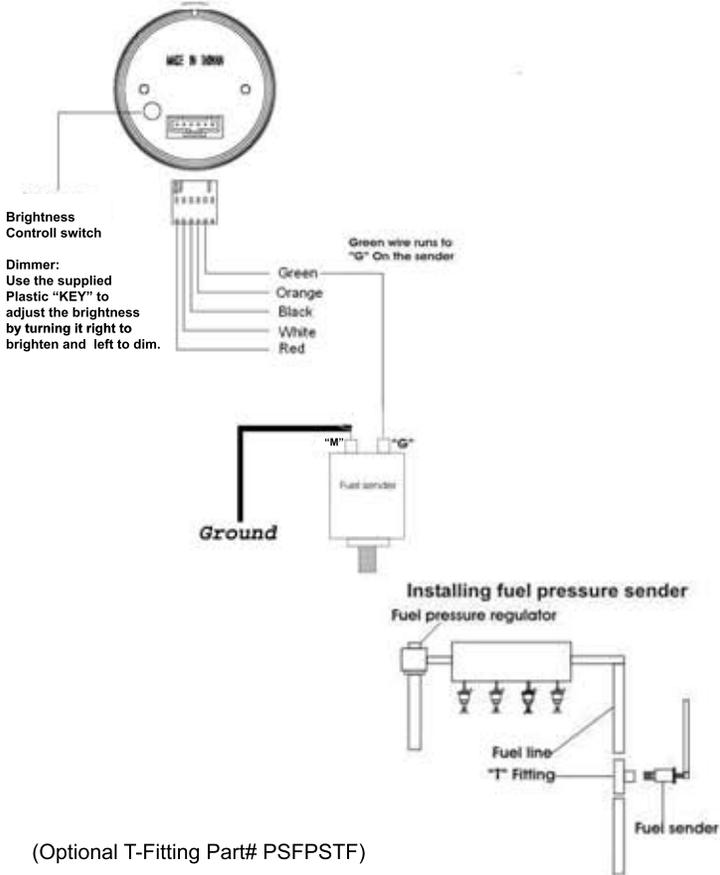

Wiring Instructions

Red Wire- 12v Accessory Power

White Wire- 12v Accessory Power

Black Wire- Ground

Orange Wire- 12v Headlight Switched Power
(This is a power source that only gets power when headlights are on)


Green Wire- Runs to the "G" Terminal on the pressure sensor

Installing the sensor:


You will notice there are two terminal posts on the pressure sensor. Fuel pressure sender thread pitch is 1/8th NPT. It is suppose to become tighter when installing, Please do not over tighten the sensor.

"G" is the signal wire (connect Green wire to "G")

"M" is a ground. Please run a separate ground to this terminal

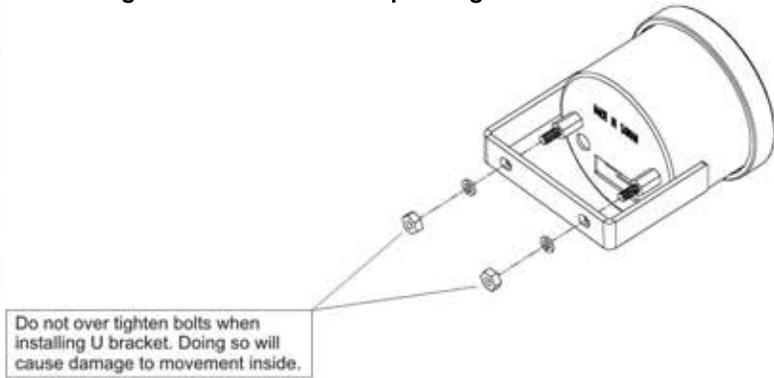

EVO Series Exhaust Gas Temp. Gauge Green/White Display

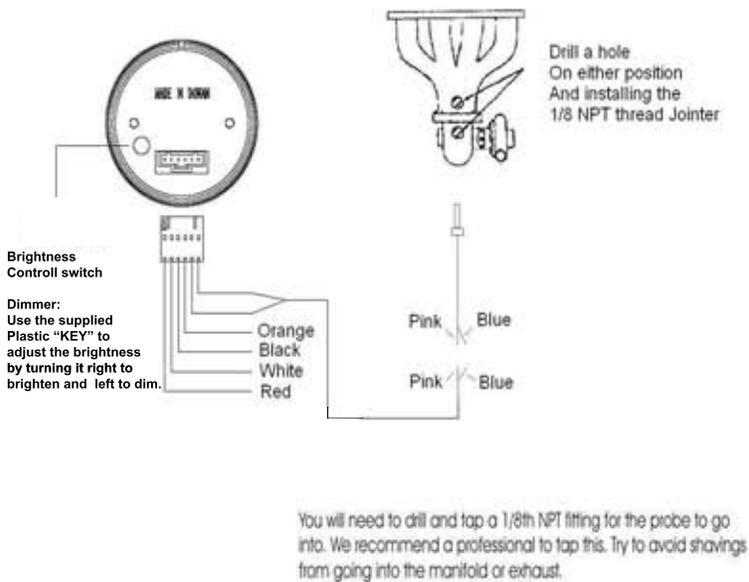

Wiring Instructions

Red Wire- 12v Accessory Power

White Wire- 12v Accessory Power

Black Wire- Ground

Orange Wire- 12v Headlight Switched Power
(This is a power source that only gets power when headlights are on)

Pink Wire- Connects to Pink wire on sensor

Blue Wire- Connects to Blue wire on sensor

Lighting Options

Day Time	Night Time	Installation
White	White	White-- Connect to acc. Power
		Orange-- Do not connect
Green	Green	White-- Do not connect
		Orange-- Connect to acc. Power
White	Green	White-- Connect to acc. Power
		Orange-- Connect to Headlight Switched Power White-- Connect to Headlight Switched Power
Green	White	Orange-- Connect to acc. Power