

## ELECTRICAL GAUGES W/WARNING

52mm JDM SERIES WHITE / AMBER LED DISPLAY

### Tachometer

<p><b>1</b></p> <p><b>BACK VIEW</b></p> <p>Optional Warning Light Wire Harness</p> <p>CYLINDER SELECTION SWITCH</p> <p>Sensor Wire Harness</p> <p>Power Wire Harness (Daisy Chain)</p> <p>Power Wire Harness</p> <p>Red - Battery (+) Black - Battery (-) White - Ignition Switch +12V Orange - Dash Lighting</p>	<p><b>2</b></p> <p>VISOR</p> <p>BUFFER</p> <p>METER</p> <p>METER CUP &amp; HOLDER</p> <p>Warning LED Red</p> <p>SET Button</p>	<p><b>3</b></p> <p>Double-Sided-Type</p> <p>Cord</p> <p>Warning Light Have To Buy Extraly.</p> <p>External Warning Light</p> <p>Warning Light Wire Harness</p>	<p><b>4</b></p>
<p><b>5</b></p> <p>CYLINDER SELECTION SWITCH</p> <p>1. Selecting Number of Cylinders: Setting the tachometer for 4, 6 or 8 (4, 6 or 3) cylinder operation is achieved simply by sliding the switch, located on back of the tachometer body, to coincide with the appropriate number of cylinders of the engine.</p> <p>2. Switch position: 0=10 cylinders, 1=1 cylinders, 2 = 2 cylinders 3=3 cylinders, 4=4 cylinders, 5=cylinders,.....</p> <p>3. When setting the number of cylinders for a rotary engine, set the cylinders number selection to 4 cylinders for 2 rotors, and to 6 cylinders for 3 rotors.</p> <p>4. The red or black wire MUST be removed before adjustment to the cylinder setting is made from the cylinder selector switch.</p>	<p><b>6</b></p> <p>CONNECTOR FOR SENSOR WIRE</p> <p>SENSOR WIRE</p> <p>TACHOMETER SIGNAL WIRE</p> <p>WHITE</p> <p>RED CONNECTOR</p> <p>ECU (ENGING COMPUTER UNIT)</p> <p><b>BACK VIEW</b></p>	<p><b>7</b></p>	<p><b>8</b></p> <p>Complete Set</p>

### Setting warning / Mute Feature

#### To set the warning feature:

After the auto calibration is complete, Press and hold the Button down for approx 5 seconds until the pointer begins to blink. Release button. Push and hold button to move quickly across the scale or Toggle button to move pointer in small increment. Once you have the pointer where you want it, wait 5 second to "set" and pointer will stop blinking.

#### Warning sound mute feature:

- 1.) With ignition key in off position, press and hold button- Turn ignition on, wait for pointer to come to a rest then release button.
- 2.) To turn sound back on-Repeat step 1

#### Backlight color select feature:

- 1.) There are two different color LED backlight display in one gauge: White and Amber.
- 2.) Press button to select a backlight color in sequence.