
ELECTRICAL GAUGES W/PEAK


SMOKE LENS SERIES AMBER RED & SUPER WHITE LED


(270° SCALE)

Fuel Level Gauge

OPENING CEREMONY

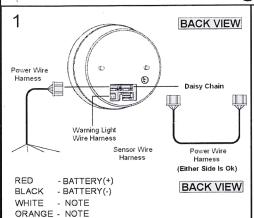

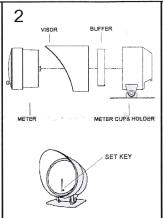

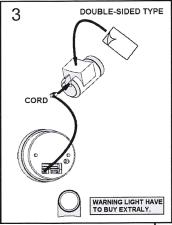

Selecting number of Fuel Level sender type:
 Setting the sender type for 1~9 type operation is achieved simply by sliding the switch.locater on


The red or black wire MUST be remover before adjustment to the sender setting is made from the sender selector switch.


See the sender select chart

back of the gauge body.to coincide with the appropriate number of fuel sender of the car.

2.switch position:

2. MUTE SELECTER SET KEY HOLD AFTER POWER ON. 3.PEAK SELECTER NORMAL SET KEY PEAK MODE \$\frac{1}{4}\$ HOLD SET KEY 3SEC 🦪 4.WARNING SET SECECTER HOLD SET KEY 5 SEC NORMAL WARNING SET POINTER MODE MODE HOLD SET KEY $\sim \downarrow$ OVER SSEC 🧐

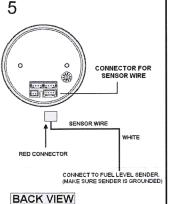



Sender Select Chart

Sender Type		Switch	
Ford Pre-'89, Chrysler	73 - 10 ohms	-1-	
Ford '89 - Present	15 - 158 ohms	-2-	
GM Pre-'65	0 - 30 ohms	-3-	
GM '65 - Present'	0 - 90 ohms	-4-	
Auto Meter Sender	240 - 33 ohms	-5-	
Eclipse '90 - '02. Civic '88 - '00	107.5 - 7 ohms	-6-	
Civic '01 - Present	131 -12 ohms	-7-	
Japan sender	0 - 120 ohms	-8-	
Tank sender	10 - 180 ohms	-9-	

1 Starting in 198, some GM models began using a different sender type.


7


NOTE:GAUGE REQUIRE FUNCTION


REQUIRE FUNCTION		INSTALLATION	
DAY TIME	NIGHT TIME	INSTALLAN	
WHITE SCALE	WHITE SCALE	WHITE WIRE→connect to ACC. AMBER WIRE→NO connect	
AMBER SCALE	AMBER SCALE	WHITE WIRE→NO connect AMBER WIRE→connect to ACC.	
WHITE SCALE	AMBER SCALE	WHITE WIRE→ connect to ACC AMBER WIRE→connect to PARKING LAMP.	
AMBER SCALE	WHITE SCALE	WHITE WIRE→connect to PARKING LAMP AMBER WIRE→connecto to ACC.	


Voltmeter

OPENING CEREMONY

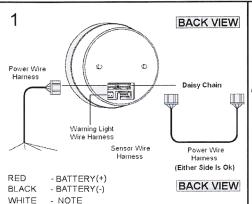


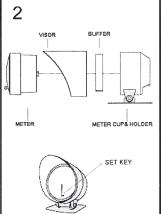

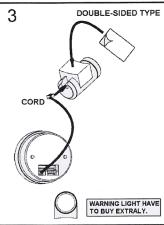


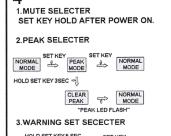



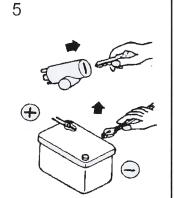

ORANGE - NOTE

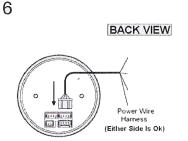

RED - BATTERY(+) - BATTERY(-) (EITHER SIDE IS OK) BLACK WHITE - NOTE ORANGE - NOTE

NOTE: GAUGE REQUIRE FUNCTION

7

REQUIRE FUNCTION		INSTALLATION	
DAY TIME	NIGHT TIME	INGIALLATION	
WHITE SCALE	WHITE SCALE	WHITE WIRE-connect to ACC AMBER WIRE-NO connect	
AMBER SCALE	AMBER STALE	WHITE WIRE>NO connect AMBER WIRE>connect to ACC.	
WHITE SCALE	AMBER SCALE	WHITE WIRE connect to ACC AMBER WIREconnect to PARKING LAMP	
AMOUND OVALLE THERE WALLE		WHITE WIREconnect to FARKING LAMP AMBER WIREconnecte to ACC	

